


Location of ECO Capacitor

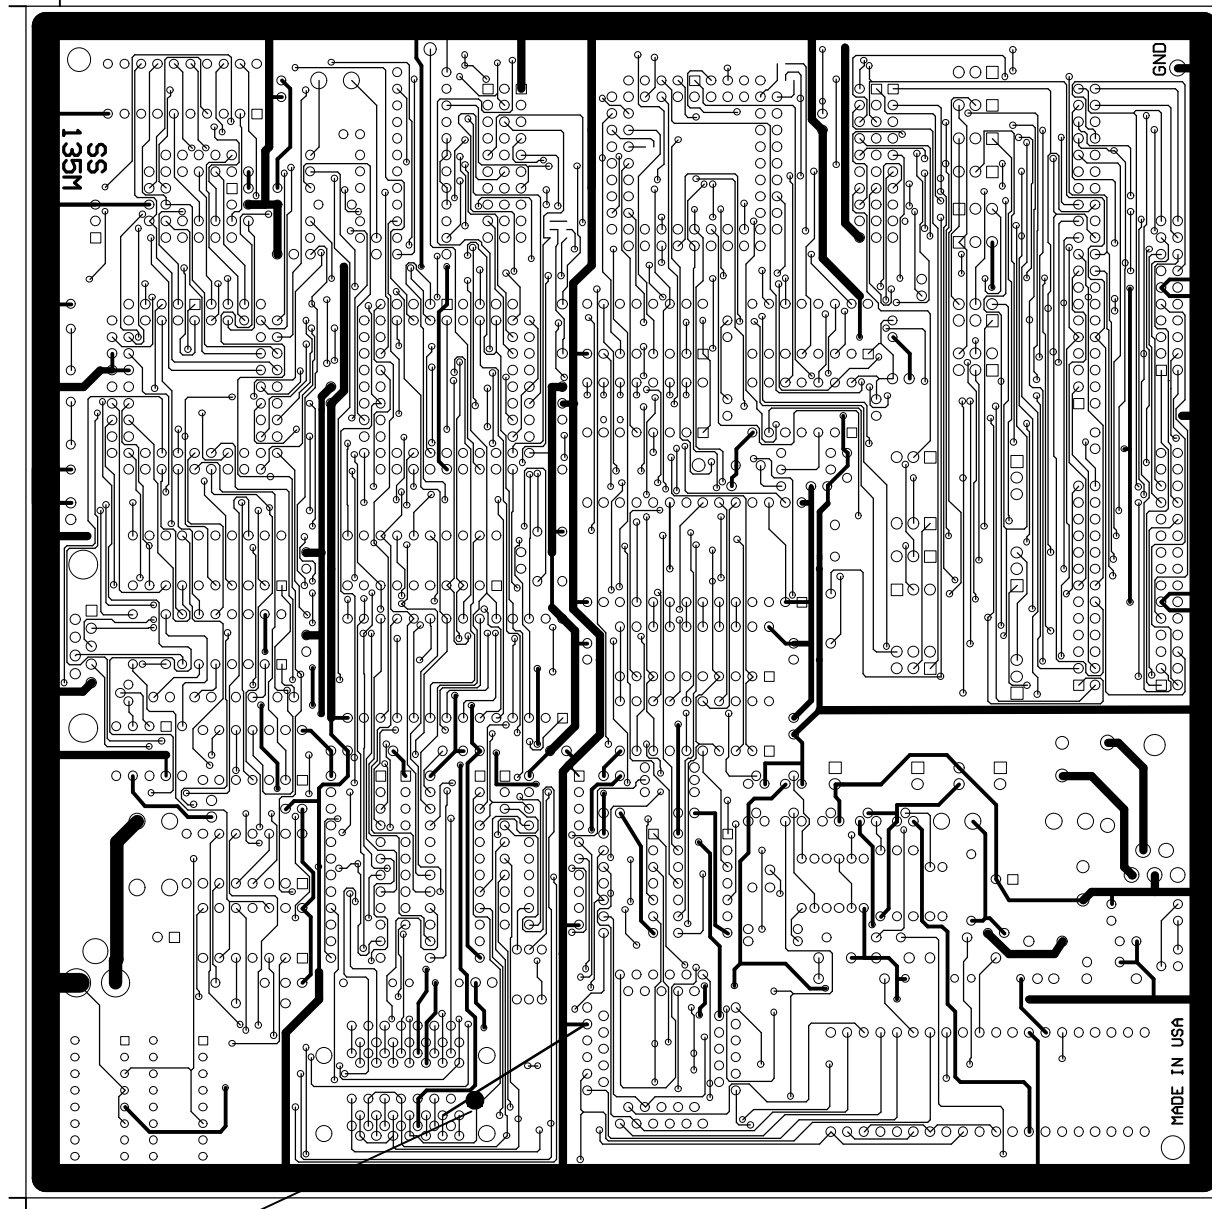

- .1 μ F Cap should be as close to SOIC socket as possible.
- One lead is soldered to the SOIC socket pin 3.
- The other lead is soldered to the PLCC socket pin 37.
- Leads must be protected by tubing to prevent shorting.