


SOURCE IMPEDANCE = 100Ω

$f = 200\text{ MHz}$

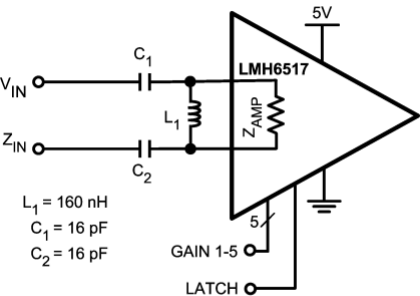

$$Z_{AMP} = (200)\Omega$$

$$Z_{IN} = (100)\Omega$$